

Entry/Exit Lighting Control

DSC-001

Application

The security system will trigger designated light(s) to turn on following the keypad buzzer during entry/exit times

Benefit

To provide lighting in entry/exit area when door is opened while system is in "Armed" state

Provides security lighting feature thereby enhancing the peace of mind aspect of your sale

Equipment Required:

- ☑ Appropriate alarm panel with 5580 Escort Module;
- ☑ **X-10 PRO** PSC04 Powerline Interface;
- ☑ Appropriate **X-10 PRO** Lamp Receiver(s) (XPD3, XPDI3, XPS3, XPFM, XPFD, PLM, and/or PLW);
- ☑ Length of 4 conductor telephone cable;
See important "Note" in Installation Section below
- ☑ Optional, but highly recommended, XPTT & XPTR Testers to evaluate X-10 signal strength within premises;
- ☑ PHC01 Mini Controller, essential in your kit, to transmit X-10 codes during final set up and verification of receiver operation



Installation:

Step 1: Locate available AC outlet near panel

Step 2: Plug PSC04 into outlet, connect phone cord between Escort 5580 and PSC04 Powerline Interface;

*Note: The PSC04's red LED will be illuminated in its idle state if the interconnecting cord is the correct one. If the LED does **not** illuminate when the 5580 is connected to the PSC04, then the phone cord is likely the wrong type. The LED will blink "Off" when the PSC04 is transmitting signals onto the power line and return to its idle "On" state when transmissions are complete.*

Step 3: Install X-10 Pro Receivers as per their supplied instructions.

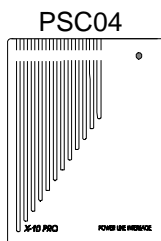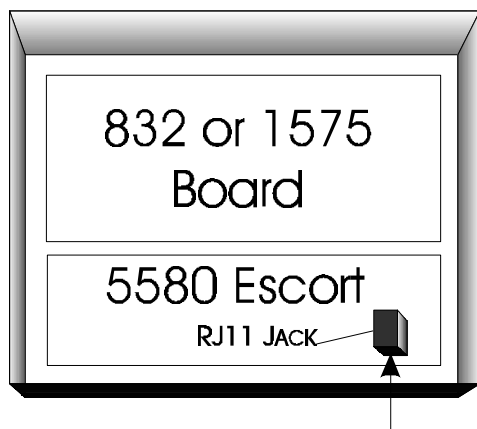

Things to watch for:

- ☑ Do premises require either a Passive Phase Coupler, Coupler Repeater, or Blocking Coupler Filter?
- ☑ Sources of AC electrical noise to determine whether any filters (XPPF) may be required: i.e.- Baby Monitors, PC's, Lap Top PC's, TV's, refrigeration units, etc.

NOTE: Be advised that X-10 PRO equipment uses the building's own wiring to communicate, therefore an unpolluted electrical environment is essential. Specific knowledge and training are required to design and install X-10 PRO systems. Should questions arise, please contact your local X-10 PRO Regional Manager or X-10 PRO's Technical Support at 1-800-832-4003.

It is understood that the choice of components is not to be relied upon as final and is provided for informational purposes only. The user acknowledges that the application of any X-10 PRO equipment should be performed by trained installers adhering to all electrical codes, principally due to the fact each electrical system they encounter is unique and performance may be different at each site. Nothing contained herein is to be construed as creating any liability or engineering responsibility from X-10 PRO and its staff. See instruction sheets supplied with each product for more specific application and wiring information.

DSC 832 & Escort 5580 Programming Information:**The Bare Essentials**

Refer to DSC PC5010 Programming Worksheet Booklet, to configure the PGM for the event which the X-10 PRO device will follow:

- Ensure all connections are correct and all other security system programming is complete;
- In this example it is assumed that you are utilizing the first available PGM (PGM3) for an X-10 device to follow, (however you could select any PGM between PGM3 & 14)
- Select PC5010 Programming Section [010]
- Enter 07 (this will configure PGM3 for keypad buzzer follow mode)
- Press “#” to exit Section [010]
- NOTE - Refer to Section [143] if you wish to have a particular Partition control this event

Refer to Escort 5580 Installation Manual, for details regarding programming the Escort 5580 to control X-10 PRO device(s):

- Refer to Section [002], Option 03 must be “On” to enable home automation
- In this example you are programming Automation Item 01, therefore Section [130] would be programmed with [064] which corresponds to X-10 Address “E1” (as shown in Appendix B) and the suggested address on the X-10 PRO switch controlling entry/exit lighting should be set to House Code “E” and Unit Number “1”
- Section [131] must have Option 01 “On” to enable the automation item
- Section [131] Option 06 may optionally be “On” if the Automation Item is to be turned on for a pre-programmed time (selectable from 1 to 255 seconds), the time is programmed in Section [301]; if not, the Automation Item will simply follow the keypad buzzer timing
- Section [134] must be programmed as [01], to enable PC5010 output control
- Section [401] must be programmed as 03 for the Automation Item to follow PGM3