



**PUR09  
UNIVERSAL  
LEARNING REMOTE**

**OWNER'S MANUAL**





## — READ THIS FIRST! —

### SAFETY CONSIDERATIONS

**Remember to exercise good common sense when using the Home Automation features of your X10 PRO Learning Remote – especially when scheduling unattended devices. There can be some unexpected consequences if not used with care. For example, an empty coffee pot can be remotely turned on. If that should happen, your coffee pot could be damaged from overheating. If an electric heater is turned on by remote control while clothing is draped over it, a fire could result. DO NOT USE the remote for the control of high power heating appliances such as portable heaters.**

**Caution:** To reduce the risk of electric shock, do not disassemble any part of the Home Automation System's plug-in Modules or Controllers. No user-serviceable parts are inside. If you spill liquid on a unit, disconnect the unit from the AC outlet to prevent possible fire or shock hazard and consult authorized service personnel.

Powerline operated equipment or accessories connected to any of these units should bear the UL, or ULc listing mark, or CSA certification mark and should not have been modified in any way that might defeat their safety features.

**Warning:** To prevent electric shock hazard, do not expose any part of the Home Automation System to rain or moisture

## — CONTENTS —

<b>INTRODUCTION .....</b>	<b>4</b>
<b>GETTING STARTED .....</b>	<b>5</b>
CONTROLLERS AND MODULES .....	5
HOUSE CODES AND UNIT CODES .....	6
<b>INSTALLING THE COMPONENTS .....</b>	<b>7</b>
TRANSCIVER MODULE .....	7
LAMP MODULE .....	8
X10 PRO LEARNING REMOTE .....	8
<b>SETTING UP YOUR REMOTE .....</b>	<b>9</b>
BUTTON DESCRIPTIONS .....	9
SETTING UP FOR TV, VCR,	
CABLE AND SAT .....	10
SEARCHING FOR CODES .....	12
IDENTIFYING CODES FOUND USING	
THE SEARCH PROCEDURE .....	13
PROGRAMMING COMBO DEVICE CODES .	14
CONTROLLING COMBO DEVICES .....	14
CONTROLLING DEVICES REQUIRING SEPARATE	
POWER ON AND OFF BUTTONS .....	15
VCR/DVD/DVR	
PUNCH-THROUGH FEATURE .....	15
VOLUME/MUTE CONTROL AND	
PUNCH-THROUGH FEATURE .....	16
SETTING ALL VOLUME/MUTE CONTROL	
TO ANY ONE MODE .....	16
SETTING ANY MODE TO USE ITS OWN	
VOLUME/MUTE CONTROL .....	17
<b>LEARNING COMMANDS .....</b>	<b>18</b>
TIPS ON LEARNING .....	18
LEARNING .....	20
RESTORING DEFAULTS .....	21
MODE RESET .....	21
MASTER RESET .....	21
<b>CONTROLLING X10 PRO MODULES .....</b>	<b>22</b>
CHANGING THE X10 HOUSE CODE: 23	
CONTROLLING AN X10 PRO	
IR MINI CONTROLLER .....	24
<b>TROUBLESHOOTING .....</b>	<b>25</b>
<b>EXPANDING YOUR SYSTEM .....</b>	<b>26</b>
<b>WARRANTY .....</b>	<b>28</b>





## INTRODUCTION

Congratulations on your purchase of the X10 PRO Learning Remote.

### ***Make your lights and appliances go to work for you....***

The X10 PRO Learning Remote will control most or all of your video and audio equipment. But what really sets it apart from other remotes is that you can also control almost any light or appliance in your home – even in another room! And it's easy to set up. Within minutes, you can be using your X10 PRO Learning Remote to dim the lights, start brewing a fresh pot of coffee and play your favorite movie!\*

### ***Here are just some of the things you can do with your X10 PRO Learning Remote...***

- Control your entire audio/video and lighting setup for the ultimate Home Theater experience.
- Turn on lights at night to scare away intruders if you hear a noise.
- Start the coffee from your bedroom when you wake up.
- Turn on your electric blanket before the movie ends, so you it's nice and warm when you go to bed.

### ***Use this manual to become familiar with your X10 PRO Learning Remote...***

This manual will explain how to set up your X10 PRO Learning Remote to use it with your existing Audio/Video equipment.

Next it will show you how you can use it to set up an X10 PRO Transceiver Module and Lamp Module (sold separately) to operate electrical products in your home.

Finally, the manual will show you can expand your system with some of the many additional X10 PRO products you can purchase.

\* Requires X10 PRO Modules, sold separately.

## GETTING STARTED

Because we know that you are eager to get started, we've kept this introduction as short as possible, but it contains very valuable information, so you should read through it very carefully.

### **CONTROLLERS AND MODULES**

The first thing you need to understand is that there are two different devices you need to control your house; Controllers and Modules. Any light or appliance that you want to control is plugged into a Module and that Module is then plugged into a standard AC outlet.

Modules receive commands from Controllers. Examples include the Lamp Module (sold separately). The Transceiver Module (also sold separately) is another example (although it also doubles as a controller as described later).

Controllers are also plugged into standard wall outlets and send commands to Modules over your existing electrical wiring in your house without affecting your electricity in any way.


The Transceiver Module works as a controller when it is used with a remote control such as the X10 PRO Learning Remote. When the Transceiver Module receives a command from a remote it sends digital signals over your existing house wiring to a Module which receives the signals and executes the command.

The remote uses radio frequency (RF) signals to send commands to the Transceiver module. RF signals can go right through walls, so you can use the remotes to control lights or appliances from anywhere in your home.





## HOUSE CODES AND UNIT CODES

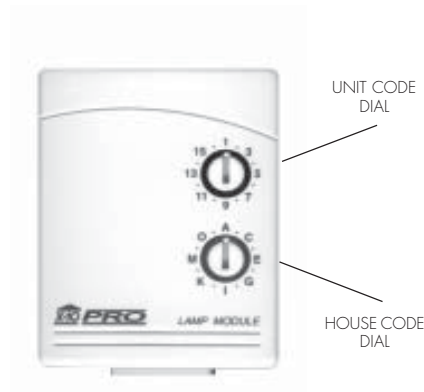

Each Module has a specific address made up of a House Code (red dial on the face of the Module) and a Unit Code (black dial on the face of the Module).

The Controller first sends an address and then a command on the AC power lines. Only the Module with a matching address will execute the command. If more than one Module has the same address, both Modules will execute the command.

Addresses are set on the Module by turning the two dials on the front of the Module to the desired letter and number (using a small screwdriver or a coin). The House Code is selected from the letters A through P, and the Unit Code is selected from the numbers 1 through 16.



## INSTALLING THE COMPONENTS

### TRANSCIVER MODULE

The Transceiver Module (sold separately) receives radio frequency (RF) commands from the X10 PRO Learning Remote to operate a lamp or appliance plugged into it. The Transceiver Module also passes on commands over your house wiring to control other X10 PRO Modules (also sold separately). Note that unlike the Lamp Module you cannot dim and brighten a lamp connected to the Transceiver Module.

You should locate the Transceiver Module centrally in the home for maximum range when controlled by the Learning Remote.

1. Set the House Code to 'A.'



2. Plug a lamp or appliance into the Transceiver Module.



3. Plug the Transceiver Module into a convenient AC outlet. Fully extend the antenna.



### LAMP MODULE

The Lamp Module (sold separately) may be used to control any incandescent lamp rated up to 300W. It is not suitable for other types of lamp such as fluorescent or energy saving lamps, or lamps which include a dimmer control.

**Caution:** Do not connect an appliance such as a coffee pot or heater to the Lamp Module. It may damage the module and the appliance and could cause a fire hazard.





1. Set the House Code to 'A' and the Unit Code to '2.'



2. Plug a lamp into the Lamp Module.



3. Plug the Lamp Module into a convenient AC outlet.



## X10 PRO LEARNING REMOTE

The X10 PRO Learning Remote lets you control practically everything electrical in your home. It has IR technology that lets you control your TV, VCR, Cable and CD or DVD player, and X10 RF technology that lets you control lamps and appliances anywhere in your home.

To find out more about configuring the X10 PRO Learning Remote to work with your audio/video equipment, see the section titled "Setting Up your Remote."

1. Push the tab and lift off the battery cover.



2. Insert two AAA batteries, taking care to match the + and - marks in the battery compartment.



## SETTING UP YOUR REMOTE

### BUTTON DESCRIPTIONS

#### INDICATOR LIGHT

The indicator light flashes when the remote is operating.

#### LEARN

Used to learn codes from other remotes.

#### POWER

Works the same as your original remote.

#### TV, VCR, CBL, SAT

Used to select the device to control.

#### X10

Lets you control X10 PRO Modules to operate lamps and appliances around the home.

#### SET UP

Used for programming the remote.

#### LAST

Selects the last channel viewed on your TV, VCR, or Cable Box.

#### CHANNEL +/-

Works like your original remote. Also used to switch X10 PRO Modules on/off.

#### VOLUME +/-

Works like your original remote. Also used to brighten and dim lamps connected to X10 PRO Modules.

#### MUTE

Works the same as your original remote.

#### 0-9

Used as your original remote and to enter device codes.

#### ENTER

Same as your original remote.

#### A-B

Toggles between TV and Video Mode.

#### MENU

Access the Menu function of the device you are controlling (if available).

**EXIT** Used to exit Menu functions.

#### NAVIGATION ARROWS

Used to navigate and adjust Menu items of the device you are controlling.

#### OK

Select Menu items of the device you are controlling.

#### PLAY, REW, FF, STOP, PAUSE, REC

Work the same as on your original remote. You must press the REC button twice to begin recording.

#### A, B, C, D

Used for extra functions in certain modes.






## SETTING UP FOR TV, VCR, CABLE, AND SAT


1. Turn on the device you want to control (TV, VCR, cable box, satellite receiver etc.).




2. Press and hold SETUP until the LED indicator lights steadily. Release the SETUP button.

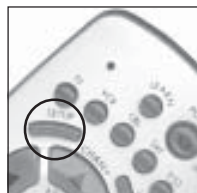

3. Press and release mode button for the device you want to control. The LED blinks once. (See notes on page 11).

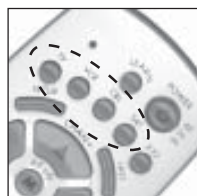

4. Enter the 4 digit Code from the Library Code Table (separate sheet). The LED turns off after the last digit entered.

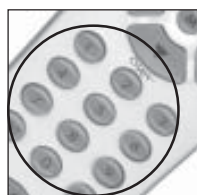

5. Point the remote at the device and press the POWER button. Your device should turn off.



6. Turn your device on and press CHANNEL+. If the device responds, setup is complete.



### Notes:

1. The TV mode key can only be used to store TV codes but you can store a code for ANY device under either the VCR, CBL, or SAT mode key. E.G., you can store a Cable code under the VCR key, or a Satellite code under the Cable key, etc.
2. If your TV/VCR/Cable Box does not respond, try the other codes for your brand. If it still doesn't respond, try the Code Search method on page 12.
3. If the LED blinked rapidly when you entered the code, you may have entered an invalid code. Recheck the code in the code list (separate sheet) and try again.
4. If some buttons do not operate your equipment, try one of the other codes for your brand.
5. When searching for a code (page 12) you might have to press CHANNEL+ many times (50+). If the device does not have a Channel Up function, use the PLAY button (VCR only) or the POWER button.






## SEARCHING FOR CODES


1. Turn on the device you want to control.



2. Press and hold SETUP until the LED indicator lights steadily. Release Setup button.

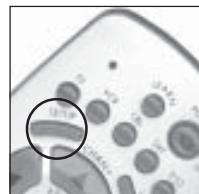


3. Press the mode button that matches the equipment you want to control. The LED blinks once.

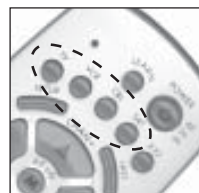


4. Press CHANNEL + repeatedly (note 5, page 11) until the device to be controlled changes channel.



If you accidentally go past the code, press CHANNEL - repeatedly until the channel changes again.

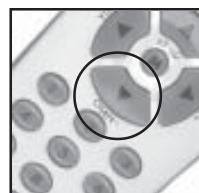


5. Press and release the ENTER button to complete the setup.

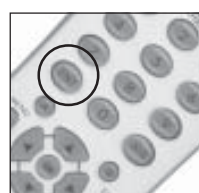


The above assumes that you want to store VCR codes under the VCR key, Cable codes under CBL, etc. If you want to store a VCR code under SAT, etc., first follow the procedure on page 11 and try ANY SAT code from the code tables, e.g. press SAT in step 3, page 10, and then enter ANY VCR code. Then follow the steps above.

## IDENTIFYING CODES FOUND USING THE SEARCH PROCEDURE

1. Press and hold the SETUP until the LED indicator lights steadily. Release Setup button.

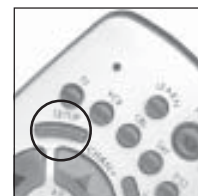


2. Press the mode button that matches the equipment you want to identify. The LED blinks once.

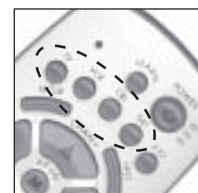


3. Press and release SETUP. The LED blinks once.




4. To find the first digit, press each number button from 0 to 9 until the LED blinks. The number you pressed is the first digit of the code.

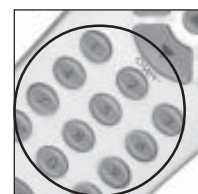

5. Press each number button from 0 to 9 again as above to find the second and third digits.

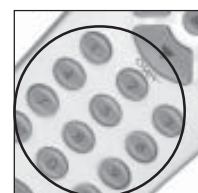

7. Press each number button in turn to find the fourth digit. When the fourth digit has been found, the LED goes out.

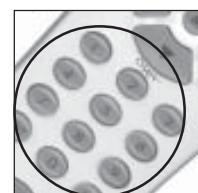



## PROGRAMMING COMBO DEVICE CODES

Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to set up two different Mode buttons to control both parts of the Combo device. For example, if you have a TV/VCR Combo, you might need to set up one code under the TV button to control the TV part AND a separate code (under any other Mode button) to control the VCR part.

## CONTROLLING COMBO DEVICES

Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) have separate buttons on the original remote to select the part of the Combo device to be controlled. For example, if your Combo device is a DVD/VCR then its original remote might have separate DVD and VCR buttons for selection of the Combo part you would control. The equivalent button functions can be found on your Learning remote by using the device Mode and SETUP buttons.

Referring to "Searching for Codes" on page 12, setup a device Mode (e.g. VCR) with the correct code for your Combo device. Assuming the DVD/VCR Combo device is the example and its code is programmed under VCR Mode, press and hold the VCR Mode button for more than one second to send the VCR button command. To send the DVD button command, quickly press and release the SETUP button followed by pressing and releasing the VCR Mode button. This method can be applied similarly to all Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) and is available for all Modes. Note this feature is not supported by all codes.

## CONTROLLING DEVICES REQUIRING SEPARATE POWER ON AND OFF BUTTONS

Some devices (e.g. certain RCA TVs) require separate Power On and Power Off buttons to turn the device on and off. The equivalent button functions can be found on your Learning remote by using the device Mode and POWER buttons. Referring to "Searching for Codes" on page 12, setup a device Mode (e.g. TV) with the correct code for your device.

Assuming a TV device is the example and its code is programmed under TV Mode, to turn your TV on, press and hold the TV Mode button for more than one second to transmit the Power On button command.

To turn the TV off, press and release the POWER button to transmit the Power Off button command. This method can be applied similarly to any device and is available for all Modes. Note this feature is not supported by all codes.

## VCR/DVD/DVR PUNCH-THROUGH FEATURE

This remote allows the 6 VCR transport buttons (i.e. PLAY, PAUSE, STOP, FF, REWIND, and REC) to Punch-Through control from any Mode programmed with TV, SAT or Cable codes to the last VCR, DVD or DVR programmed Mode you used. Normally other types of remotes only punch-through (from another Mode) on the 6 VCR buttons to the device programmed under the VCR Mode button. This is not much use if you are using a DVD programmed under a Mode other than VCR. For example, if you have 2 DVD, VCR or DVR devices programmed into this remote, the last one you accessed on the remote will be the one that has control of the 6 VCR transport buttons when in any other Mode.





## VCR/DVD/DVR PUNCH-THROUGH FEATURE, CONT.

This feature will not operate if the programmed TV, SAT or Cable code has its own VCR transport button control e.g. a TV Combo, SAT/PVR, etc.

## VOLUME/MUTE CONTROL AND PUNCH-THROUGH FEATURE

This remote lets you select which device Mode controls your Volume/Mute buttons. The remote is initially set (factory default) for all device Modes programmed with "Visual" codes (e.g. TV, VCR, DVD, DVR, SAT & CABLE) and "Audio" codes (e.g. CD & AUDIO) to use their own Volume/Mute control if present. If the programmed "Visual" code has no Volume/Mute operation of its own then those buttons will punch-through control to the TV Mode device without needing to change to TV Mode. Please refer to the next page for more information.

Any Mode chosen for Volume/Mute control MUST have its own Volume/Mute function or the Volume/Mute buttons will do nothing.

## SETTING ALL VOLUME/MUTE CONTROL TO ANY ONE MODE

This routine can set all Modes to "punch-through" to any one chosen Mode for Volume/Mute button control without the needing to change to that Mode.

1. Press and hold the SETUP button until the red indicator turns on, then release the button.
2. Press and hold the MUTE button until the red indicator blinks off, then release the button.

3. Press and release the desired Mode button (TV, VCR, etc.) for Volume/Mute control, the red indicator blinks then stays on.
4. Press and release the MUTE button and the red indicator turns off. The red indicator will blink rapidly for three seconds if the Mode you have selected has no Volume/Mute control.
5. All other Modes will now punch-through to your chosen Mode for Volume/Mute control.
6. All "Visual" and "Audio" programmed Modes will now punch-through to the respective Modes you have chosen for Volume/Mute control.

## SETTING ANY MODE TO USE ITS OWN VOLUME/MUTE CONTROL

This routine can set any Mode to use only its own Volume/Mute control. Note - If your chosen Mode has no Volume/Mute functions of its own then the Volume/Mute buttons will do nothing.

1. Press and hold the SETUP button until the red indicator turns on, then release the button.
2. Press and hold the MUTE button until the red indicator blinks off, then release the button.
3. Press and release the desired Mode button (TV, VCR, etc.), the red indicator blinks then stays on.
4. Press and release the VOLUME-(Down) button, the red indicator blinks then stays on.
5. Press and release the MUTE button and the red indicator turns off.
6. All "Visual" and "Audio" programmed Modes will now punch-through to the respective Modes you have chosen for Volume/Mute control.





## LEARNING

The learning feature lets you “learn” functions from your original remote control. For example - you may want to use your remote to operate the RANDOM PLAY feature from your original CD remote control. This remote is equipped with an “easy learning” feature that lets you “learn” features (such as RANDOM PLAY from your original CD remote).

### Tips On Learning

You can only learn one device type under any one Mode button e.g. only learn TV codes under the **TV** Mode, VCR codes under the **VCR** Mode, etc. If you are trying to learn from a “Universal” remote, it might have more than one code type stored under a Mode. Try learning from another remote to see if there’s a problem with the type or brand of remote you are trying to learn from.

- a. Some functions from some types of remotes might not be able to be learned.
- b. No functions may be stored under LEARN, X10, or SETUP buttons.
- c. **Only one original device type can be learned per individual Mode.**
- d. Use fresh batteries for both the Learning Remote and the Original Remote.
- e. Keep at least three feet away from incandescent or low-energy lights when learning.
- f. Perform a Master Clear (see page 21) before learning and try learning 2 or 3 commands initially. Then carry out a Master Clear before completely learning your original remote’s commands.
- g. Place the original remote end-to-end with the Learning Remote so the IR transmitters on both remotes are directly in line with each other. You may need to adjust the height of either remote to achieve this.

- h. Keep the distance between the two remotes to approximately 1 inch and do not move or change the distance between the two remotes until you have learned all the required buttons for that Mode.
- i. When Learning, do not release the button being Learned until the red indicator has blinked off for half a second.
- j. Avoid learning your original remote Volume/Mute buttons unless you are sure these operate the same device e.g. some original DVD remotes include TV Volume/Mute button control and can be two different types of code.
- k. Avoid learning your original remote VCR transport buttons unless you are sure these operate the same device e.g. some original TV remotes include VCR button control and can be two different types of code.
- l. If learning the first or second buttons for a Mode results in continuous errors then try the following:
  - i. End the Learn session by pressing the **SETUP** key.
  - ii. Clear out the learned commands for that Mode. (See page 21).
  - iii. Check the IR transmitters are correctly aligned between the two remotes.
  - iv. Adjust the distance between the two remotes to be closer (e.g. half an inch) or a further away (e.g. 2 inches) from each other.
  - v. Try learning the original remote for that Mode again.

If problems reoccur with the same button check the original remote button being learned – does it transmit? Does it operate the target device? Try learning that button under a *different clear* Mode. If it learns okay then it is likely to be a different code type from the others and cannot be learned under the same Mode.






## LEARNING

Your PURO9 Learning Remote has the codes for most TVs, VCRs, etc. in its code library. However, if the code for your particular device is not found in the library, you can learn these codes from your existing remote. Or if you find a code from the tables in this manual that "almost" matches your device, but a few buttons are missing, you can learn just those buttons.


1. Point your existing remote at the PURO9 Remote with a distance of about 1 inch between remotes.




2. Press and hold SETUP until the LED indicator lights steadily. Release the Setup button.

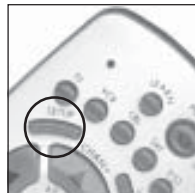

3. Press the mode button that matches the equipment you want to learn. The LED blinks once.

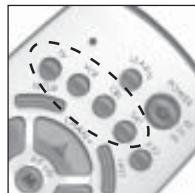

4. Press and release the LEARN button. The LED blinks once.

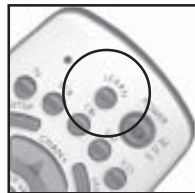

5. Press and release the button on the PURO9 Remote that you want to teach. (e.g. POWER) The LED blinks once.




6. Press the button on your existing remote that you want to learn. Hold the button until the LED on the PURO9 Remote blinks off.



7. Repeat steps 5 and 6 for each button you want to learn.

8. When you've finished learning all the keys, press SETUP.

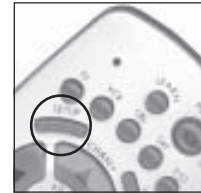

## RESTORING THE DEFAULTS

If you have problems learning keys, try a Mode Reset or Master Reset, and then try learning them again.

### Mode Reset

Press Setup, Mode, Learn, Learn, Setup. This restores the default code for that particular mode (TV, VCR, CBL, SAT) key.

### Master Reset

Press Setup, Learn, Learn, Setup. This restores the default for ALL keys.







## CONTROLLING X10 PRO MODULES

If you have purchased and installed a Transceiver Module, you can control it and other X10 PRO Modules as follows:

1. Press and release the X10 button.

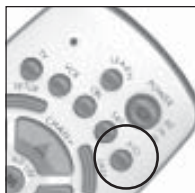

2. Use the number buttons to enter the Unit Code number of the chosen module. (You do not need to enter '0' first for a single digit number.)

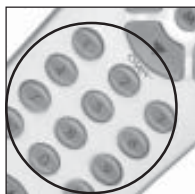

3. Press the appropriate button for the function you require (see below).



### X10 FUNCTIONS:


On:	CHANNEL +
Off:	CHANNEL -
Bright:	VOLUME +
Dim:	VOLUME -
All Lamps On:	POWER
All Modules Off:	MUTE

**Note:** You cannot dim or brighten an Appliance Module. If the module was off and you press Bright or Dim (VOLUME+ or VOLUME-) this will simply turn the module on.


## CHANGING THE X10 HOUSE CODE:

The X10 PRO Learning Remote defaults to House Code A, and in most cases you will not need to change this unless you are experiencing interference from a neighboring X10 system.


1. Press and release the X10 button.

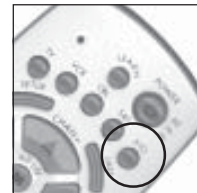


2. Press and hold SETUP until the LED indicator lights steadily. Release Setup button.

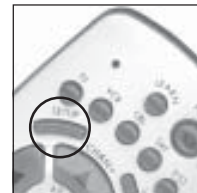

3. Use the number buttons to enter the number equivalent to the chosen House Code (1=A, 2=B ..16=P).

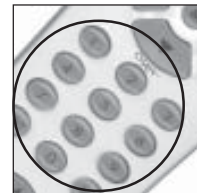

4. Press the ENTER button to confirm the House Code. The LED turns off.

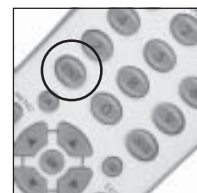

**Note:** The House Code you choose must match the House Code on the Transceiver and Modules you are using it with.







## CONTROLLING AN X10 PRO IR MINI CONTROLLER (IR543)

If you already own an IR Mini Controller, you will need to change the X10 Home Automation code in the remote to use it. The code for standard X10 RF Home Automation is 0999. The code to control the IR Mini Controller is 0998. To change the code:


1. Press and hold SETUP until the LED indicator lights steadily. Release the SETUP button.

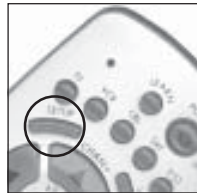

2. Press and release the X10 button.

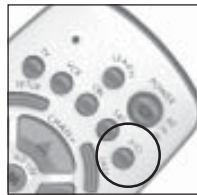

3. Enter 0998 to control an IR Mini Controller, or 0999 for standard X10 control. The LED turns off after the last digit entered.

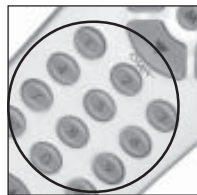

**Note:** In most cases, you will not need to use the IR Mini Controller to receive commands from the X10 PRO Learning Remote – the RF Transceiver Module does this for you and has the added advantage of working through walls. You can if you wish control the IR Mini Controller and the RF Transceiver Module at the same time. To do this store code 0999 under the X10 key and store 0998 under any other key (except TV).

## — TROUBLESHOOTING —

### The Transceiver Module doesn't respond to the remote:

- Check the House Code on the Transceiver Module is set to 'A.' If you have changed the House Code on the remote (see p. 23), check that it matches the House Code on the Transceiver Module.
- Make sure the X10 button is set to code 0999, see page 24.
- Press the ON/OFF button on the front of the Transceiver to confirm it operates the item connected to it.

### The Transceiver Module works, but other modules don't respond:

- Check that the Module has the same House Code as the Transceiver Module.
- Try plugging the Module into a different outlet.

Note: if you use an RF Transceiver (such as the PAT01 or PAT02) to control X10 PRO Modules, you will be able to control up to 16 Modules. With a Transceiver, when you press 1-6-ON you turn on Module number 16. However, if you use an IR543, when you press 1-6-ON you turn on Modules 1 AND 6. The IR543 can only control 10 Modules (1-9 plus 0=10).

### The Remote won't control your A/V equipment, or doesn't work at all:

- Use manual controls or the original remote control to confirm the equipment is working properly.
- Be sure you pressed the device key for the device you want to control.
- Reenter the code for your A/V product from the code listings on the separate sheet included.
- Try searching for codes as described on page 12.
- Replace the Remote's batteries.





 

## EXPANDING YOUR SYSTEM

The modules illustrated below represent just a few of the wide range of X10 PRO compatible modules you can choose from to expand your Home Automation system. They are available from electrical outlets, department stores and mail order catalogs.

X10 PRO Home Automation products also integrate with X10 PRO security systems, so you can use the security remotes that come with them to control macros and flash lights when the security system is tripped.


Check out our Web Site at:  
<http://www.x10pro.com>  
for more information on these and many other X10 PRO products.

Use the **Mini Timer PHT02** to program up to 4 X10 PRO Modules to go on and off up to twice a day.

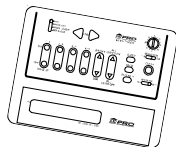

The **Dual Floodlight Motion Detector PHS01** turns on at dusk and/or when it detects movement, and sends X10 PRO signals to control other modules, or trigger ActiveHome macros.

Fit a **Wireless Wall Switch PHW04D/PHW04D-G** anywhere you need an extra switch - with no wires. Sends commands to the Transceiver Module just like a remote.


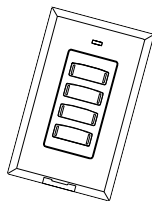


The **PowerFlash Module PSC01** connects to dry contact or low voltage alarm terminals on your burglar alarm system and flashes X10 PRO controlled lights when it is triggered.





Switch entrance or garage lights on from your car with the convenient **Keychain Remote PHR04**.

 Replace your existing wall switches with the **Wall Switch Module PLW01**. Installs like a regular dimmer. On/Off and Bright/Dim functions. Other models available for 3-way and fluorescent lighting.

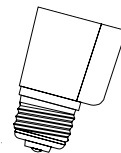



Control a ceiling light, closet light, etc. with the convenient **Screw-in Lamp Module PSM04**.

Replace existing AC wall outlets with the **Receptacle Module PA011**. Has one 15A/1800W controlled outlet and one outlet which is always on.

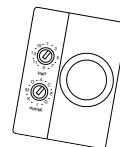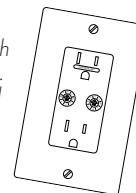

Use a controller to trigger the **Remote Chime Module PHH02** to call Dad up for dinner, or warn people you're about to turn on the sprinklers.

 Use the isolated contacts on the **Universal Module PUM01** to control pool pumps, sprinklers, drapes and other low voltage equipment. Includes built in warning beeper.

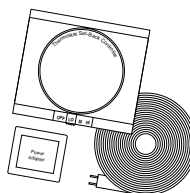

The **Thermostat Setback Controller TH2807** mounts below your thermostat to reduce the room temperature at night or at the times you set to save energy. No wiring needed to your existing thermostat.

Plug in a **Heavy Duty Module PAM04** to control 220V appliances such as air conditioners and water heaters.



Also, see [www.x10pro.com](http://www.x10pro.com) for details on X10 PRO's full range of products.





## WARRANTY

X10 PRO warrants X10 PRO products to be free from defective material and workmanship for a period of two (2) years from the original date of purchase at retail. X10 PRO agrees to repair or replace, at its sole discretion, a defective X10 PRO product if returned to X10 PRO within the warranty period and with proof of purchase. If service is required under this warranty:

Call 1-800-832-4003,  
visit [www.x10pro.com](http://www.x10pro.com),  
or e-mail [x10protec@x10pro.com](mailto:x10protec@x10pro.com).

**For help or more information on setup, please visit:**

<http://www.x10pro.com>

## FCC CAUTION

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This equipment generates and uses radio frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturers instructions, it may cause interference to radio and television reception. It has been type tested and found to comply with the limits for remote control devices in accordance with the specifications in Sub-Parts B and C of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by unplugging the equipment, try to correct the interference by one or more of the following measures.

- Reorient the antenna of the radio/TV experiencing the interference.
- Relocate the interface with respect to the radio/TV.
- Move the interface away from the radio/TV.
- Plug the interface into an outlet on a different electrical circuit from the radio/TV experiencing the interference.
- If necessary, consult your local Dealer for additional suggestions.

**NOTE:** Modifications to any of the components in this kit will void the user's authority to operate this equipment.





NOTES

NOTES





**X10 PRO,  
3824 North 5th St., Suite C,  
North Las Vegas, NV 89032**

**Web Site:  
<http://www.x10pro.com>**

Printed in USA  
PUR09-07/07

